

Webcam PTZ Instructions

- 1) Log into the cameras and have the PTZ on the screen. For the best viewing, single left click the PTZ camera so a red box shows up around it then click on the magnifying glass with the “+” sign.
- 2) Click on the PTZ control Button and choose “PTZ Control Panel”
- 3) A new window appears with PTZ controls, you can drag this anywhere on the screen by left clicking it and dragging it (Click along the edge of it). To begin controlling the PTZ, Click the button at the top to “On”. All of the controls are the same.

